

Golf Buddy®

WT4

Manual

CONTENTS

- 1. GETTING STARTED**
- 2. BASIC OPERATIONS**
- 3. ADVANCED OPERATIONS**
- 4. SOFTWARE UPDATES**

GolfBuddy[®] WT4



Thank you for choosing GolfBuddy.

The GolfBuddy WT4 is a feature-rich lifestyle GPS watch that brings fashion and function to one device. The slim watch design offers both digital and analogue watch features that you can wear on and off the course. As with all other GolfBuddy products, the WT4 comes preloaded with over 37,000 course information & free lifetime course & software updates, in more than 130 countries around the world.

Button overview



 Power / ESC

 
OK Menu / Select

 Up / Mark

 Down / Score card

Screen Overview

© Watch Mode Screen

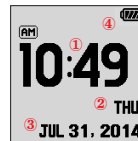
















 





 

























- ① Time
- ② Day
- ③ Date
- ④ Battery Indicator

© Play Mode Screen



- ① Hole Number
- ② Left/ Right Green
- ③ Par Info
- ④ Meters (In Yards if not indicated)
- ⑤ Battery Indicator
- ⑥ Dynamic Green View
- ⑦ Distance to the Center of the Green
- ⑧ Distance to the Back of the Green
- ⑨ Distance to the Front of the Green

 50Meterpost	 250Meterpost	 Trees
 50Yardpost	 250Yardpost	 Bush
 100Meterpost	 Left Bunker	 Rough
 100Yardpost	 Right Bunker	 Short Tree
 150Meterpost	 Bunkers	 Hole
 150Yardpost	 Fairway	 Out of Bound
 200Meterpost	 Garden	 OB + Tree
 200Yardpost	 Tree	 OB + Rock

 OB + Bunker	 Hill	 Bridge
 Sand Box	 Right Dogleg	 Beach
 Target	 Left Dogleg	 Cliff
 Rock	 Fence	 Pond
 Downhill	 Cave	 Cart Path
 Uphill	 Windmill	 Stump
 Water	 Tower	 Pole
 Wall	 Creek	

1. GETTING STARTED

1.1. Power On/Off

Press and hold the  button to turn on/off the device.







1.2 Charging




 

 
You can charge the device by inserting the device into the charging dock as depicted in the picture below. Align the charger posts with the two buttons on the right side of your WT4 unit, and tilt it so that the right side goes in first. Then, press the unit down until it clicks. The battery indicator will display while charging and will display when fully charged. To release, slide the GB icon on the left side of the charger over to the left.








1.3. Time Setting

 
The time will set automatically once the WT4 successfully connects to satellites. To set the clock manually, press and hold the  button to bring up the time setting mode. Press the  or  button to change the hour, then press the  button 4 times to apply the changes.

Note: The minutes are set automatically upon successful satellite connection and cannot be manually adjusted.

* Day Format: In time setting mode, press the  button once to edit the Day Format. The default Day Format is in English; the secondary option is in French. When the blinking  /  icon appears, navigate with the  /  buttons to select desired selection. Press the  button three times to apply the changes and return to Watch Mode.

* 12/24 Hour Format: In time setting mode, press the  button twice to edit the 12/24 Hour Format. When the blinking  icon appears, navigate with the  /  buttons to select desired selection. Press the  button twice to apply the changes and return to Watch Mode.

 *DST: In time setting mode, press the **OK** button three times to edit the Daylight Savings Time. When the blinking **DST** icon appears, navigate with the **▲** / **▼** buttons to turn on/off DST mode. Press the **OK** button once to apply the changes and return to Watch Mode.

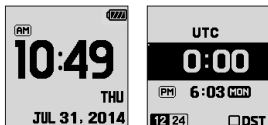

■ Sunrise/Sunset Time

From Watch Mode, press the **▲** button to view the Sunrise/Sunset Time (only applicable when the WT4 is connected to the satellite). To exit this function and to return to Watch Mode, press the **▲** button twice.



■ Stop Watch

From Watch Mode, press the **▲** button twice to use the Stop Watch Function. Press the **OK** button to start/ stop the Stop Watch, and press the **▼** button to reset the record. To exit this function and to return to Watch Mode, press the **▲** button.




1.4. Main Menu

From Watch Mode, press and hold the **OK** button to view the Main Menu and navigate with the **▲** / **▼** buttons.



■ Switching to Play Screen

From Watch Mode, press and hold the **OK** button. Press the **OK** button to select the  icon and to switch to Play Screen. After the GolfBuddy WT4 connects to satellites, it will recognize the nearest golf course and provide the course/hole information.

2. BASIC OPERATION

2.1. Play Screen Information



■ Distance to the Green

Play Mode provides the distances to the front, center and back of the green.



■ Time

From Play Mode, press the **OK** button to view the current time while displaying the distance to the center of the green. To exit and to return to Play Mode, press the **OK** button twice.



■ GPSTracking

From Play Mode, press the **OK** button twice to view GPS tracking while displaying the distance to the center of the green. To exit and to return to Play Mode, press the **OK** button once.

 
2.2. Targets/Hazards Information



From Play Mode, press the **▼** button to view the Targets/Hazards information. Press the **▲** button again to return to Play Mode.

2.3. Setting

From Play Mode, press and hold the **OK** button for the menu.

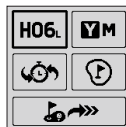

H06.L Hole Selection/ Left & Right Green Selection

YM Yard / Meter

Previous Hole Selection

 
Pin Placement

Exit


■ Hole Selection / Left & Right Green Selection

 
From Play Mode, to change holes or to change the Left & Right Green Selection, select the **H06.L** icon by pressing and holding the **OK** button. Navigate by using the **▲** / **▼** buttons, then press the **OK** button to select desired hole. Select left or right green* by navigating with the **▲** / **▼** buttons then press the **OK** button to confirm the selection. (*Note: The Left & Right Green selection is only available if there is a left & right green on the course).

Press and hold the **▼** button for 2 seconds while on the pin placement screen to select between the left and right green. Press the **OK** button to confirm.




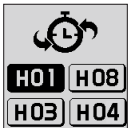 
■ Switching between Yard / Meter

From Play Mode, press and hold the OK button for the menu. Select the  icon by navigating with the ▲ / ▼ buttons, then press the OK button to confirm the selection.

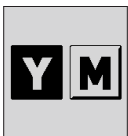

■ Previously Recognized Hole Selection

 
From Play Mode, press and hold the OK button for the menu. Select the  icon by navigating with the ▲ / ▼ buttons, then press the OK button to confirm the selection.







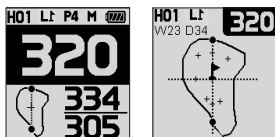


3. ADVANCED OPERATIONS




3.1 Dynamic Green View / Pin Placement

■ Dynamic Green View





 
You can access the Dynamic Green View/ Pin Placement Mode by simply pressing the  button from Play Mode. You can also access the Dynamic Green View/ Pin Placement Mode from Play Mode, by pressing and holding the  button and by selecting the  icon by navigating with the  /  buttons. Once the  icon is highlighted, press the  button. Dynamic Green View will allow you to always get the Front/Center/Back distances to the green from your angle of approach.

■ Pin Placement






From Green View, you may also change the Pin placement by navigating with the  /  buttons, then press the  button to return to Play Mode.

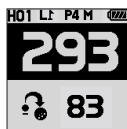3.2. Measuring Shot Distance

 From Play Mode, press and hold the  button to start measuring your shot distance. Then press the  button again to finish and view the measured distance.




3.3. Recording Scores


From Play Mode, press and hold the  button to start accessing the Score Tracking Module. You can navigate and record your scores by using the  /  buttons then press the  button to complete the recording. Press and hold the  button anytime to go back to Play Mode.

H01	P4	5
H02	P4	3
H03	P5	4
12(E)		

3.4. End Round


From Play Mode, press and hold the **OK** button. Select the  icon by navigating with the **▲** / **▼** buttons, then press the **OK** button. Select Yes or No by navigating with the **▲** / **▼** buttons, then press the **OK** button.

3.5. GPS Tracking

While in Watch Mode, press the **OK** button then select the  icon. Press the **OK** button to start recording and press the **▼** button to delete the record. Press the **▲** button to switch between Yard / Meter. GPS tracking is activated automatically when the WT4 is in Play Mode.




3.6. Systems Information

While in Watch Mode, press the **OK** button twice then select the  icon. Press the **OK** button to view detailed system information including model number and serial number.

※ How to Reset the WT4

To reset the device, press and hold the **⏻** buttons for about 8 seconds simultaneously to restart the device.

※ How to Set in Demo Mode

In Watch Mode, press and hold the **OK** button to bring up the Main Menu. Select Play Golf, and when the unit is searching for satellites, press and hold the **▲** and **▼** buttons simultaneously for 2 seconds to activate the Demo Mode. To exit Demo Mode, press and hold the **OK** button. Select the  icon and press the **OK** button. Confirm "Y" to exit Demo Mode.

4. SOFTWARE UPDATES

Your GolfBuddy WT4 unit has been pre-loaded with the latest firmware and world-wide course maps available at the time of manufacture, so it's ready to play right out of the box. For optimum performance and longer product life, we do recommend you register your unit and keep it updated with the latest levels of firmware. You can also add the latest course maps and updates for free once you have registered your unit. The instructions below will provide you with a step-by-step guide on how to register and update your GolfBuddy WT4.

1. Downloading the GolfBuddy Management Software (GB Manager) to your computer:

- Please visit our website at www.gpsgolfbuddy.com
- Click on the panel titled "Download GB Course Manager" to download and install the GolfBuddy Manager program. You will then see a screen with an option to choose either Windows or Mac based software.
- Click on the correct version for your computer. Once downloaded, you can run the application to install the GB Manager on your computer.
- Once completed, you will see a blue icon on your desktop that you will use to access the GB Manager once you have submitted the registration for your User ID and Password.

 
2. Creating a User ID:

- Open the GB Manager application by clicking on the blue icon on your desktop.
- You will see a Login Panel . Click on "Sign up for new user" at the bottom. This will bring up a panel for you to create your User ID and Password.
- Fill in all the details that are required (indicated by "*"). Please note the instructions regarding no Caps, Symbols or Spaces & 4-15 characters long. You will need to click the "Check Availability" to verify your selected User ID is valid and not already being used.
- Click "Submit" at the bottom of the form.
- You have now created your User ID and Password.

Make sure you write them down somewhere in case you forget them!

3. Registering your GolfBuddy WT4:


- Connect your GolfBuddy unit to a USB port on your computer using the USB cable provided with the unit.
- After a short time, your GolfBuddy unit should show an icon on the screen indicating it is connected to the computer.
Notes: You can disregard any driver download requests that your computer may say is required.
- Click on the blue GB icon on your desktop and open the Login Panel.
- Enter your User ID and Password. You should now see a panel that indicates the GB Manager is searching for the device. After a short time, you will see “Connection Established”. At this stage, your unit is successfully registered to the User ID that you created and will not be able to connect to any other User ID.

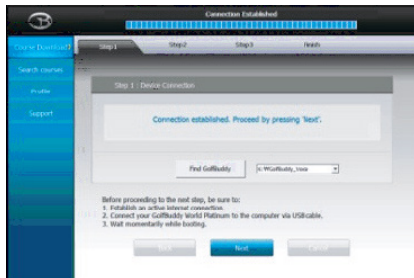

4. Updating your GolfBuddy


4.1. Step 1

 Once you get the “Connection Established” message, please click “Next” to proceed to Step2. Firmware Update.

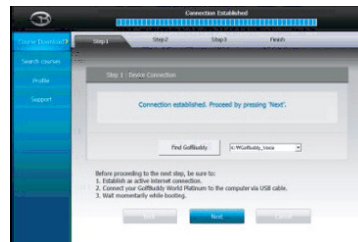


4.2. Step 2 : Firmware Update

 At step 2, click “Next” to install the latest firmware. If the firmware is already at the latest level, click “Next” to proceed to step 3.

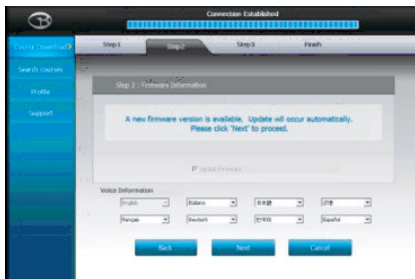

4.3. Step 3 : Course Download

 Select the countries that you would like to be updated from the list of countries. Click “Next”. You will see a panel that asks you to select “Overwrite” or “Newly Updated Only”(default option - already selected). Click “OK” to start the course update. Once all courses have been downloaded and your unit updated, you will receive a message “Update Complete”. You can now disconnect the unit. Your GolfBuddy is now ready to go with the latest updates!

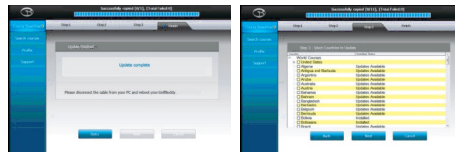

4.4. Search Courses

You can search courses by country, state, and city. You can also view when the course was last updated.

Golf Club	State	City	Last Updated Date
12 Shores GC	MI	Tougeon	07/23/2014
1757 GC	VA	Shirley	12/06/2014
18 Hills Creek GC	NY	Hartung	05/24/2014
2 Creek Branch GC	NY	Zenith	06/20/2014
2 Lakes GC	PA	Providence	03/05/2014
3 Fair at Four Points	CA	San Diego	05/16/2014
3 SW Club	IN	Carlisle	02/20/2014
5 K 60 Golf & CC	IN	West	03/06/2014
508 Club, The	AZ	Phoenix	06/03/2014
79 Club GC	NY	Albany	2013/2014
81 Golf Ranch	SD	Sioux Falls	03/06/2014
A. C. Reed GC	FL	Fort Worth	03/06/2014
A. N. Blank GC	IN	Evansville	03/21/2014
A. S. Tully GC	NY	Hempstead	11/20/2014
A. L. Gordon GC	MD	Columbia	06/12/2014
A. J. GC	TX	Bucknell	12/10/2014

4.5. Profile

System Information for user's WT4 can be found here.

User Information

Please enter eight characters

User ID:

User Number:

Apply

System Information

Device : GolfBuddy_Voice Location : E-W

Serial : 2.2.3 Serial : 2.2.3

Serial : 2.2.3 SW : CHMS1274-1278

